

ASSEMBLING INSTRUCTION


CRASH PAD FITTING

KN6101-17

WWW.BARRACUDAMOTO.COM

LEGEND

- | | | |
|---|---|---|
| 1. HEAD PAD
TESTA TAMPONE
TIESTA DE TOPE
STURZPAD KOPF
TÊTE TAMPON | 3. BASE PAD
BASE TAMPONE
BASE DE TOPE
STURZPAD BASIS
BASE TAMPON | 5. SPECIFIC THICKNESS H20MM
SPESSORE SPECIFICO H20MM
ESPACIADOR H20MM
ABSTANDSHALTER H20MM
ESPACEUR H20MM |
| 2. SCREW M10X180
VITE M10X180
TORNILLO M10X180
SCHRAUBE M10X180
VIS M10X180 | 4. SPECIFIC THICKNESS H60MM
SPESSORE SPECIFICO H60MM
ESPACIADOR H60MM
ABSTANDSHALTER H60MM
ESPACEUR H60MM | |

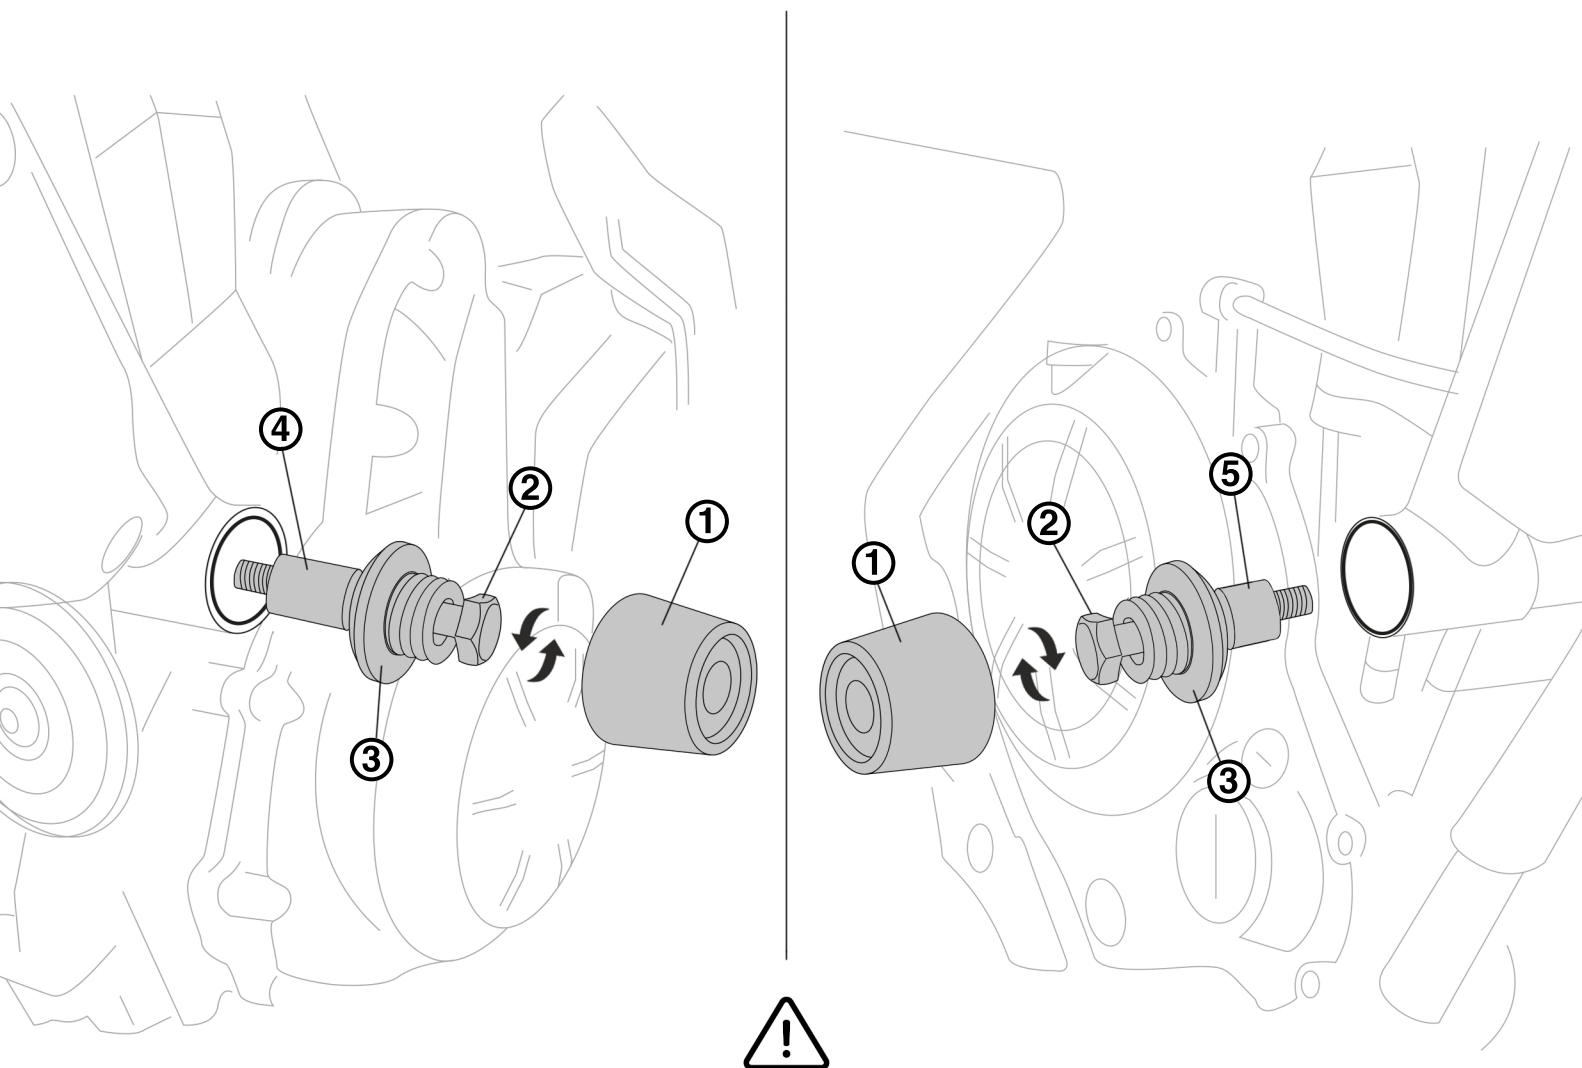

EN: IDENTIFY THE FIXING POINTS ON THE BIKE AND DISASSEMBLE BY PERFORMING THE OPERATION ONE SIDE AT A TIME.

IT: INDIVIDUARE I PUNTI DI FISSAGGIO SULLA MOTO E SMONTARE ESEGUENDO L'OPERAZIONE UN LATO PER VOLTA.

ES: IDENTIFIQUE LOS PUNTOS DE FIJACIÓN EN LA MOTOCICLETA Y DESARME REALIZANDO LA OPERACIÓN UN LADO A LA VEZ.

DE: IDENTIFIZIEREN SIE DIE BEFESTIGUNGSPUNKTE AM FAHRRAD UND BAUEN SIE ES AUSEINANDER, INDEM SIE DEN VORGANG EINSEITIG NACH DEM ANDEREN DURCHFÜHREN.

FR: IDENTIFIEZ LES POINTS DE FIXATION SUR LE VÉLO ET DÉMONTÉZ-LES EN EFFECTUANT L'OPÉRATION UN CÔTÉ.