

**MOUNTING PROCEDURE** 


KIT SAVE CARTER YAMAHA FZ1-FZ8

YF1101

## WWW.BARRACUDAMOTO.COM

## KIT

X2. PVC HEAD X2. SAVE CARTER BASE X2. SPACER X2. BOLT 10X100

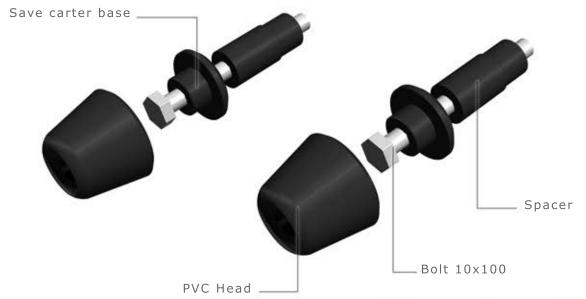

ATTACK POINT TO THE CHASSIS



SEARCH AND FIND THE FIXING POINT ON THE MOTORBIKE BEFORE START TO MOUNTAIN, USE THE SPE-CIFIC THICKNESS AND BOLTS LIKE DESCRIBED IN THE PICTURE (SO YOU CAN GET THE RIGHT PROMI-NENCE FROM THE MOTORBIKE).

FIX THE PVC HEAD AFTER FIXED AND TIGHTEN ALL THE KIT ONLY